

PoshTime® REMOTE SWITCH

The PoshTime® remote switch can operate one or two 'whisper' POWER Grills (WPG). Activated in its normal default time period, the PoshTime® switch:

- boosts the Heat Recovery Ventilator (HRV) to high
- fully opens the 'whisper' POWER Grill
- automatically times down for a pre-set period, then returns the HRV to its continuous speed and returns the WPG to its normal at-rest position


These actions can increase that room's exhaust rate by up to eight times.

When power is first connected to the PoshTime® Switch, all four green LED's flash for four seconds. PoshTime® is now set at its normal time period of 28 minutes (each LED indicates 7 minutes).

After a power outage or when the HRV has been unplugged, PoshTime® automatically re-sets itself to this normal time period when power is restored.

OPERATING PoshTime®

PoshTime® can be manually turned on or off by covering one switch pad at a time or by using the sweep function.

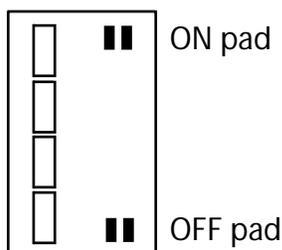

Manual ON: Hold your finger over the **black ON pad** and away from the black OFF pad. The green LED's light up in succession from the bottom up.

Manual OFF: Hold your finger over the **black OFF pad** and away from the black ON pad. The green LED's turn off in succession from the top down.

Sweep ON: Cover the black OFF pad with your hand. Without uncovering the black OFF pad, move your hand upwards so it covers both ON and OFF pads. Continue moving your hand upwards to uncover the OFF pad. PoshTime® is now ON.

Sweep OFF: The reverse of the Sweep ON function. Cover the black ON pad with your hand. Without uncovering the black ON pad, move your hand downwards so it covers both ON and OFF pads. Continue moving your hand downwards to uncover the ON pad. PoshTime® is now OFF.

Alternate Time Periods

The normal default time period of 28 minutes is most commonly used. For special purposes, three other time period settings are available:

8 hours HRV on high and WPG fully open

4 hours HRV on high and WPG fully open

1 hour HRV on continuous speed and WPG fully open

Setting Alternate Time Periods

Simultaneously cover both ON and OFF pads. In four seconds, one or more LED's will begin to flash. The number of flashing LED's indicates the current time period:


8 hour mode: 4 LED's flash

4 hour mode: 3 LED's flash

28 min. mode: 2 LED's flash

1 hour mode: 1 LED flashes

If you keep the pads covered, PoshTime® will continue to cycle through the different time periods, flashing 4 times for each time period. Decide which time period you want. Remove your hand from the pads at any time during the 4-flash cycle. The PoshTime® switch is now pre-set to the selected alternate time period.

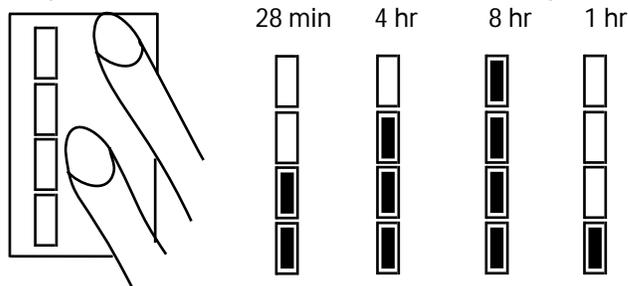

PoshTime® TROUBLESHOOTING

PoshTime® ON and OFF pads can be activated (or the time period changed) by direct sunlight, sunlight reflected in a mirror, someone leaning on the switch or a towel hung in front of it.

Doesn't time down or HRV doesn't switch to HIGH:

PoshTime® could be set to an alternate time period. Unplug the HRV and plug it in again, or see Setting Alternate Time Periods above.

PoshTime® won't respond: You must have clean fingers to activate the switch.

None of the PoshTime®'s work: Fuse has blown or older style fuse holder has broken. Replacement fuse is taped to inside of electrical control box or you may need a replacement fuse holder.